



Livingstone International Pty Ltd
106-116 Epsom Road,
Rosebery NSW 2018, Australia

TEL : 1300 780 078 FAX: 1300 780 008



THIS RESPIRATOR IS APPROVED ONLY IN THE FOLLOWING CONFIGURATION:

TC NO.	Protection ¹	Respirator	Caution and Limitations ²
		AP0028-3	
84A-4175	N95	×	ABCJMNOPS

1. PROTECTION

N95-Particulate Filter (95% filter efficiency level) effective against particulate aerosols free oil; time use restrictions may apply.

2. CAUTIONS AND LIMITATIONS

- A. Not for use in atmospheres containing less than 19.5 percent oxygen.
- B. Not for use in the atmospheres immediately dangerous to life or health.
- C. Do not exceed maximum use concentrations established by regulatory standards
- J. Failure to properly use and maintain this product could result in injury or death.
- M. All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.
- N. Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
- O. Refer to User's Instruction, and/or maintenance manuals for information on use and maintenance of these respirators.
- P. NIOSH does not evaluate respirators for use as surgical masks.
- S. Special or critical User's Instructions and/or specific use limitations apply. Refer to User's instructions before donning.


IMPORTANT

- 1. Before use, the wearer must read and understand these User Instructions. Keep these instructions for reference.
- 2. Individuals with a compromised respiratory system, such as asthma or emphysema, should consult a physician and complete a medical evaluation prior to use.

SERVICE LIFE PLAN

- 1. The shelf life of this respirator is 2 years.
- 2. This respirator shall be placed in its original box and in a closed poly bag with stored in a clean, cool and dry atmosphere to ensure that it is protected against dust, chemicals, moisture, excessive heat and direct sunlight.
- 3. Do not exceed maximum use concentrations established by regulatory standards.
- 4. Discard and replace respirator if breathing resistance becomes difficult or at the end of this shift (8 working hours).
- 5. Failure to properly use and maintain this product could result in injury or death.
- 6. Application of masks should be in accordance with appropriate safety and health standards, mask selection tables or pursuant to the recommendations of an industrial hygienist.
- 7. This mask removes only dusts and mists from the air and not designed to be used in atmospheres containing less than 19.5% oxygen. This mask does not provide relief from nuisance odors when the solvent concentrations or gas/vapor level are below P.E.L.(Permissible Exposure Limit).
- 8. Before using masks, the concentration of solvent in the work places such as undercoating and dust proofing operations must be determined. If the solvent concentrations are above the PEL, the approved organic vapor mask must be used.
- 9. Not for use in the atmospheres immediately dangerous to life or health.
- 10. Misreading of any instruction or warning on the use of this respirator and/or failure to wear this respirator during the exposure can reduce mask efficiency and wearer protection.

RESPIRATOR FITTING INSTRUCTIONS

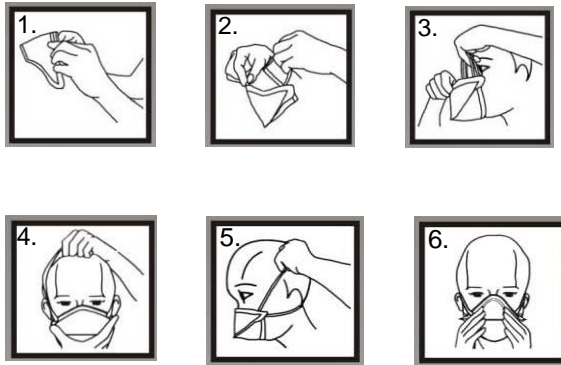

RESPIRATOR FITTING INSTRUCTIONS

1. Fold the mask from right to left.
2. Pull the both straps out from the folded mask.
3. Position the mask under the chin with noseclip facing upwards.
4. Pull the straps over your head and rests them on your neck.
5. Pull the one of the strap over your head and position it.
6. Mould the noseclip to the shape of the nose.

Change respirator immediately if breathing becomes difficult or respirator becomes damaged or distorted, or a proper face fit cannot be maintained. Remember, careful observance of these fitting instructions is an important step in safe respirator use.

To check the correct fit, cup with both hands the respirator and exhale powerfully. If any airflow indicates leakage around the edges of the respirator stretch the headbands again by pulling them backwards. If necessary the length of the elastic headband can be shortened by knotting. Then correct the position of the respirator (see picture) and check again.

WARNING! It is not allowed to use the mask without proper fit. If you can't achieve a proper seal, do not use the respirator.

USE INSTRUCTION

1. Before using masks, a qualitative or quantitative face-fitting test must be performed by user according to OSHA 29 CFR 1910.134
2. Before occupational use of this respirator a written respiratory protection program must be implemented meeting all the local government requirements. In the United States employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.
3. This mask removes only dusts and mists from the air and not designed to be used in atmospheres containing less than 19.5% oxygen. This mask does not provide relief from nuisance odors when the solvent concentrations or gas/vapor level are below P.E.L.(Permissible Exposure Limit).
4. Do not use when concentrations of contaminant are immediately awkward to life or health or when concentrations exceed 10 x PEL(permissible Exposure Limit).
5. Before using masks, the concentration of solvent in the work places such as undercoating and dust proofing operations must be determined. If the solvent concentrations are above the PEL, the approved organic vapor mask must be used.
6. Application of masks should be in accordance with appropriate safety and health standards, mask selection tables or pursuant to the recommendations of an industrial hygienist.
7. Do not use with beards or other facial hair or other conditions that prevent a good seal between the face and the sealing surface of the respirator.

SPECIAL INSTRUCTION

The part number AP0028-3 filtering facepiece respirator has been manufactured by AERO PRO CO., LTD. for private label Livingstone International Pty Ltd under TC-84A-4175.