

Particulate Respirator N95

Model : 1801

User Instructions

Revision : 1.1

IMPORTANT

Before use, the user must read and understand this *User Instructions*.

Application

It can be used for filtration of certain non-oily particles, such as dust, droplets, pollen and splashes.

It CANNOT be used for protection against gases, vapors, oil aerosols, asbestos, or sandblasting. Do not use where particulate concentrations that exceed ten times the occupational exposure limit or applicable regulations, whichever is lower. It is not intended for medical use. Please consult the local authority if you would like to use it for medical purposes.

In the United States, it cannot be used when the U.S. Occupational Safety and Health Administration's substance specific standards specify other types of respiratory protection, such as the standards for arsenic, cadmium, lead in the construction industry. Please consult the local authority if you would like to use it in any workplace for safety and health.

The respirator does not supply oxygen.

Instructions for Use


1. Follow all applicable local laws and regulations for proper use.
2. In the United States, a written respiratory protection program must be implemented meeting all the requirements of OSHA 29 CFR 1910.134 before use of this respirator for occupational safety protection, such as training, fit testing, medical evaluation, and applicable OSHA substance specific standards.

In Canada, CSA standard Z94.4 requirements must be met and/or requirements of the applicable jurisdiction, as appropriate.

Follow all regulatory requirements where applicable.

3. Inspect respirator before use to ensure that it is in good operating condition. Examine all the respirator parts for signs of damage. Assure there are no holes in the breathing zone and no damage has occurred. Immediately replace respirator if damaged or anything missing.
4. Check seal before use as specified in Wearing Instructions herein below. Do not use the respirator if a proper seal cannot be achieved.
5. Leave the contaminated area immediately and remove the product if you feel dizzy or uncomfortable.
6. Dispose of used respirator in accordance with applicable regulations.

Wearing Instructions

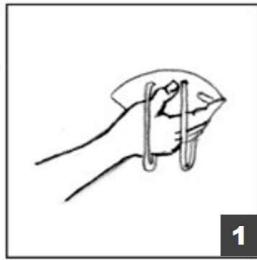

Position the respirator in your hands with the nose piece at your fingertips.



Cup the respirator in your hand allowing the headbands to hang below your hand. Hold the respirator under your chin with the nosepiece up.



The top strap goes over and rests at the top back of your head. The bottom strap is positioned around the neck and below the ears. Do not crisscross straps.



Place your fingertips from both hands at the top of the metal nose clip. Slide fingertips down both sides of the metal strip to mold the nose area to the shape of your nose.

Removing Instructions



DO NOT TOUCH the front of the respirator!
It may be contaminated!



Remove by pulling the bottom strap over back of head, followed by the top strap, without touching the respirator.



Discard in waste container.
WASH YOUR HANDS!

WARNINGS

1. The respirator provides protection against certain particles. It does not eliminate the risk of any infection or contracting any disease.
2. Failure to follow all instructions may reduce the effectiveness of the respirator and result in sickness or death.
3. Use it only in adequately ventilated areas containing sufficient oxygen to support life. Do not use the respirator in atmospheres containing less than 19.5% oxygen. It does not supply oxygen.
4. Do not use when concentrations of contaminants are immediately dangerous to life and health, are unknown or when concentrations exceed ten times the allowed exposure limit or the limit according to any applicable standards or regulations, whichever is lower.

5. Do not alter, wash, reuse or misuse respirator in any way.
6. Any use with beards, facial hair or other similar conditions may reduce the effectiveness of the respirator. The respirator must **not** be used if facial hair lies along the sealing area of the respirator. For example, use with beards, sideburns, moustaches, or even more than one day or 24 hours of growth of stubble, is not permitted. Facial hair either growing in or protruding into the area of the primary sealing surfaces of the respirator may prevent a good seal and is not permitted.
7. Any degradation to the respirator seal has the potential to decrease respiratory protection to the wearer. A worker should not enter a contaminated work area when conditions prevent a good seal of the respirator facepiece to the face.
8. It can protect you from entry through nose and mouth. It cannot prevent entry through other ways such as skin and eyes which should be protected by other personal protective equipment(s).
9. This respirator is designed for adults who can fully understand its use and limitations. It is not designed to be used by children.
10. Persons having problem(s) with the respiratory system should consult a physician before use.

Storage Conditions

Store in a relative humidity not exceeding 80%, in a non-corrosive gas and non-chemicals environment, avoiding dust, sunlight, extreme temperature and humidity. Store the respirator in the temperature from -20°C (-4°F) to 30°C (86°F).

Store the respirator in its original packaging away from contaminated areas.

Period of Use

Subject to the Storage Conditions specified above, the respirator may be used till the expiry date printed on the packaging. One-time use only. When it is contaminated or damaged, or breathing becomes difficult, replace it with a new one.

Warranties and Representations

THE WARRANTIES AND REPRESENTATIONS EXPRESSED OR REFERENCED HEREIN ARE EXCLUSIVE. NO OTHER WARRANTY OR REPRESENTATION, WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED BY THE MANUFACTURER AND THE IMPORTER (OR DISTRIBUTOR). TO THE EXTENT ALLOWED BY LOCAL LAW, THE MANUFACTURER AND THE IMPORTER (OR THE DISTRIBUTOR) DISCLAIM ALL IMPLIED WARRANTIES OR REPRESENTATIONS INCLUDING ANY IMPLIED WARRANTIES OR REPRESENTATIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Manufacturer's Contact Information

Luoyang Kelijian Technology Co., Ltd.

Address: 1001 meters west of Huangzhuang Village, Dianzhuang Town, Yibin District,

Luoyang City, Henan Province

Email: info@luoyangkelijian.com

Phone: 400-6052-678 (Within China)

+86 18338806118 (Other countries)