
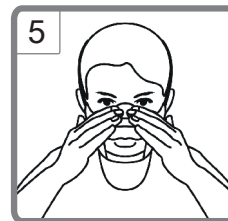
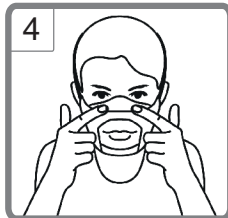
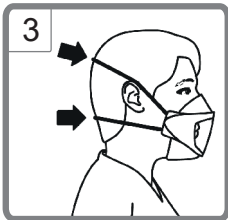
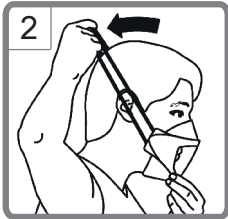


# P. AIR CLEAR

## Donning instruction

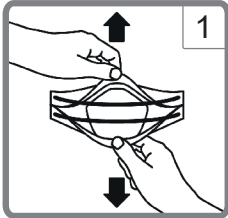

### Use clean hands when handling a respirator.

1. Remove packaging and open the respirator and take hold of the head straps.
2. Hold the respirator over your nose, mouth and chin, lightly secure on the face with one hand on the outside, and with your free hand pull the two retaining straps over your head. Do not touch the respirator on the inside.
3. Pull the lower retaining strap under your ears and pull the upper retaining strap over the back of your head.
4. Press the nose clip onto your face with both index fingers.  
Spectacle wearers: remove the spectacle to adjust the nose clip!  
Pinching the nose clip using one hand may result in improper fit and less effective respirator performance. Use two hands.
5. Perform a User Seal Check prior to each wearing. To check the respirator-to-face seal, place both hands completely over the respirator and exhale sharply. Be careful not to disturb the position of the respirator. If air leaks around nose, readjust the nosepiece as described in step 4.

**If you CANNOT achieve a proper seal, DO NOT enter the contaminated area. Report to your supervisor.**

### Removal Instructions:

Spectacle wearers: remove glasses before removing the respirator.  
Hold the retaining straps with both hands, pull over your head and remove the respirator from your face. Remove the respirator without touching the respirators components.  
Wash and clean your hands after removing the respirator. Dispose of used product in accordance with applicable regulations.

**Single use only! Do not reuse!**

optrel tec ag  
industriestrasse 2  
ch-9630 wattwil  
phone: +41 (0)71 987 42 00  
fax: +41 (0)71 987 42 99  
info@optrel.com  
www.optrel.com

optrel inc.  
5 Division St #35  
US-East Greenwich, RI 02818  
phone: +1 401-398-7240  
fax: +1 401-398-2740  
info@optrel.com  
www.optrel.com