

Arbill A501760
Arbill A501780
Gateway 80301, 80302V, 80304CV
Jinfuyu Kuranbon 1803
JSP 121, 122, 123
Allpro 8610A, 8611A
Eyevex ER1395, ER1395V
Libus 4730, 4740, 4745
JFY 1150, 1151, [PF44150](#) (N95)
Polyscientific Engineering 4011 (N95)
SAS 8610, 8611 (N95)
Safety&Style SBMASCARA0
Grupo M&R R32
BIELCOR B200 (N95)
Prosafe Systems SV210 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mould the nosepiece to the shape of your nose.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



JSP 821, 822, 823

Donning Procedures

1. Hold the respirator in one hand with nosepiece at your fingertips, allowing the headbands to hang below your hand. The harness clip should be unsecured.
2. Press the respirator against your face with the nose part of the mask resting on the bridge of your nose.
3. Place the top band high at the back of your head.
4. Pull the two parts of the lower band back behind the neck and secure the clip. Adjust the tension of the strap by pulling the top band up from the head and sliding the tension adjuster down to the head to achieve a comfortable fit.
5. Test the fit of the respirator. Cup both hands over the respirator and exhale vigorously. If air leaks around the edges of the mask, tighten and/or reposition the bands for a better fit. Repeat this test.
6. Remember, careful observance of these fitting instructions is an important step for safe respirator use. If you CANNOT achieve a proper fit, DO NOT enter the contaminated area. See your supervisor for the instruction to obtain the proper fitting of your respirator.




JSP 321, 322, 323

Donning Procedures

1. Mould the nosepiece to the shape at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both bands, mould the nosepiece to the shape of your nose.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area. See your supervisor for proper fitting respiratory protection.

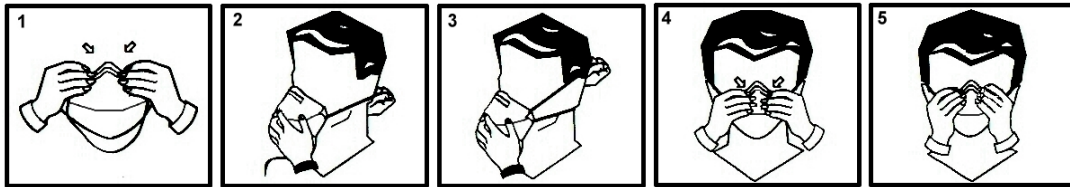

South West Safety

7150, 7151, 7152, 7153, 7154, 7156, 7157, 7160, 7177

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mould the nosepiece to the shape of your nose.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the hands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area. See your supervisor for proper fitting respiratory protection.



Toolpro TP08210, TP08511

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mold the nosepiece to the shape of your nose.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit. Change the respirator immediately if breathing becomes difficult, damaged, distorted, or a proper face fit cannot be maintained. Careful observance of these instructions is an important step in safe respirator use. This respirator helps to protect against certain particulate contaminants but does not eliminate exposure to or risk of contracting disease or infection. Misuse may result in sickness or death.




TOYO SAFETY 1724 (N95)

Donning Procedures


1. Put the respirator against your face with logo oriented your chin. Make sure the respirator is oriented correctly. Press the respirator against your face with the nose foam on the bridge of your nose.
2. Position the headbands cross your ears and hook them on the back of your head. If the headband loose, adjust the length of headband. Refer to the Figure 2, furthermore, please do not wear the headbands on your ears directly; it is very dangerous due to high leakage.
3. Press the respirator against your face to make your face totally fit with the respirator.
4. Test the fit. Cup both hands over the respirator and exhale vigorously. If air leaks are detected, adjust the position of the respirator and check if air leaks again.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area. See your supervisor for proper fitting respiratory protection.

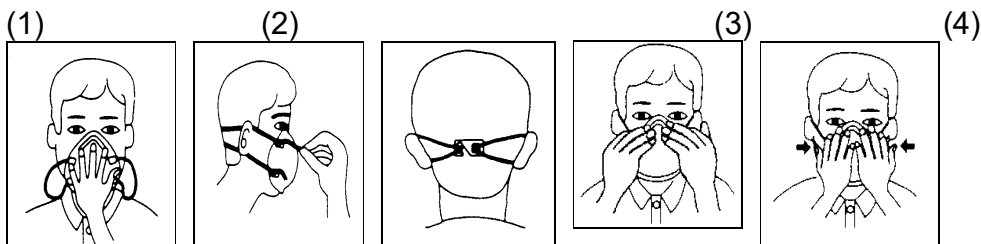

Headband Adjustment

1. Pull the end of headband to direction ①, then you can adjust it freely.
2. Pull up the adjuster to direction ① and pull headband to direction ②, then you can adjust it freely.

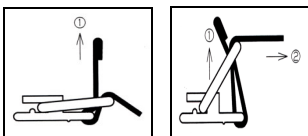

JFY 1740 (N95)


Donning Procedures

1. Mould the nosepiece to shape the respirator with your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head.
4. Using both hands, mould the nosepiece to the shape of your nose.
5. Pull up or down the band through ring adjuster to tune the tightness of band.
6. Test the fit.
Cup both hands over the respirator and exhale vigorously.
If air flows around your nose, tighten the nosepiece.
If air leaks around the edges, reposition the bands for better fit.

- a) More compact folding can be achieved by pushing in arrowed direction and pleating along with emboss lines.
- b) The plastic band hooks can be used to tie on or tie off the band.

See your supervisor for proper fitting respiratory protection.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

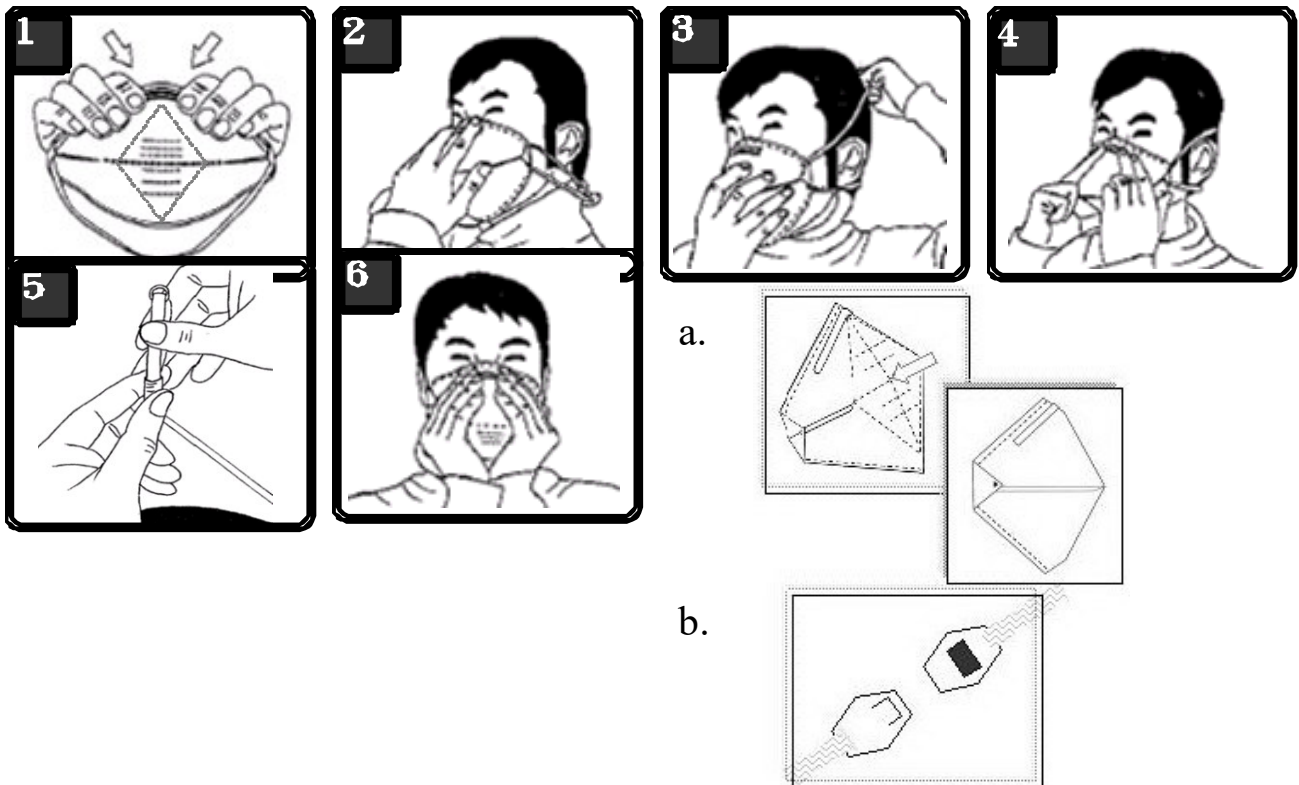


TOYO SAFETY 1795 (N95)

Donning Procedures

1. Put the respirator against your face with logo oriented your chin. Make sure the respirator is oriented correctly. Press the respirator against your face with the nose foam on the bridge of your nose.
2. Position the top band high on the back of your head. Move the bottom band below your ears.
3. Press the respirator against your face to make your face totally fit with the respirator.
4. Test the fit. Cup both hands over the respirator and exhale vigorously. If air leaks are detected, adjust the position of the respirator and check if air leaks again.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

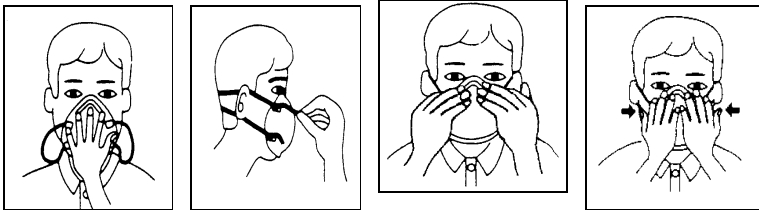

JFY 2150, 2151 (N95)

Donning Procedures

1. Before every single use, replace a new filter onto the facepiece.
2. Slip the side flap of the facepiece into the matching slot on the filter. Do it again for the other side. Make sure the filter has been sit properly onto the facepiece completely.
3. Hold the respirator in one hand and pull the headbands by the other hand. Press the respirator against your face with the nose foam on the bridge of your nose, pulling the headbands over your head to locate.
4. Position the top band high on the back of your head. Move the bottom band below your ears.
5. Adjust the strap tension by pulling the straps as shown in the figure.
6. Test the fit. Cup both hands over the respirator and exhale vigorously. If any leakage is detected, readjust the position of the respirator according to steps #4, #5 and #6 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



JFY 3150, 3151, 3153 (N95)

AMC 1315 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, pulling the headbands by the other hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Adjust the strap tension by pulling the straps as shown in the Figure.
5. Using both hands, mould the nosepiece to the shape of your nose.
6. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



JFY 668150, 668151 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, pulling the headbands by the other hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Adjust the strap tension by pulling the ring adjuster as shown in the Figure.
5. Using both hands, mould the nosepiece to the shape of your nose.
6. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



Safety&Style SBMASCARAV (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mould the nosepiece to the shape of your nose.
5. Using both hands, mold the metal nosepiece to the shape of your nose and inhale vigorously. If no negative pressure is felt inside the respirator, adjust and tighten the nosepiece. If any leakage is detected, readjust the position of the respirator according to steps #2 to #5 get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



Grupo M&R R52 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mould the nosepiece to the shape of your nose.
5. Test the fit. Cup both hands over the respirators and inhale vigorously. If no negative pressure is felt inside the respirator, adjust and tighten the nosepiece. If any leakage is detected, readjust the position of the respirator according to steps #3, #4 and #5 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.




JFY 4155S, 4155ML (N95)

Würth 0899110210 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the straps to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top strap high on the back of your head. Move the bottom strap over your head and position it below your ears.
4. Adjust the strap tension by pulling the straps as shown in the Figure.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the straps for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

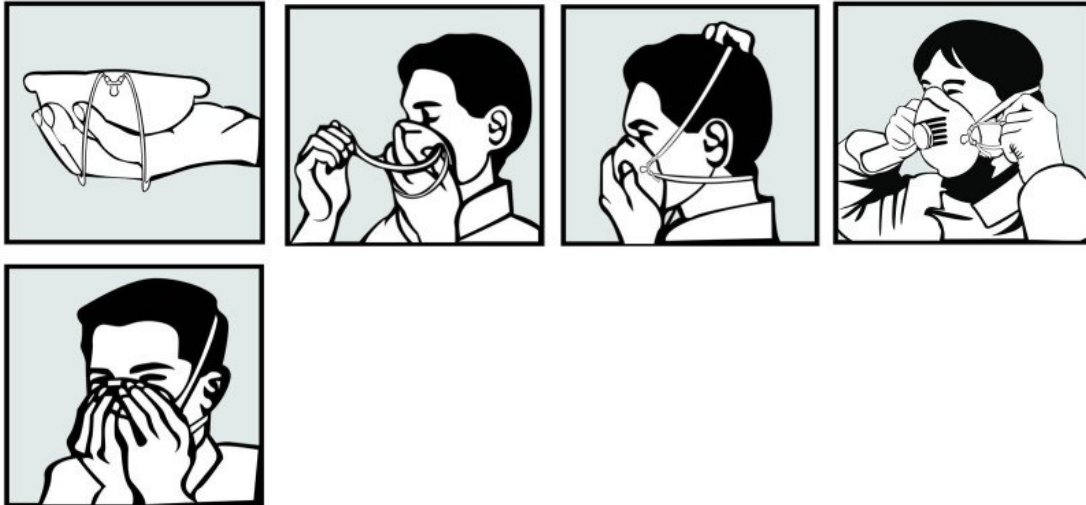


Grupo M&R R41 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the straps to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top strap high on the back of your head. Move the bottom strap over your head and position it below your ears.
4. Adjust the strap tension by pulling the straps as shown in the Figure.
5. Test the fit. Cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the respirator, adjust and tighten the nosepiece. If any leakage is detected, readjust the position of the respirator according to steps #3, #4 and #5 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

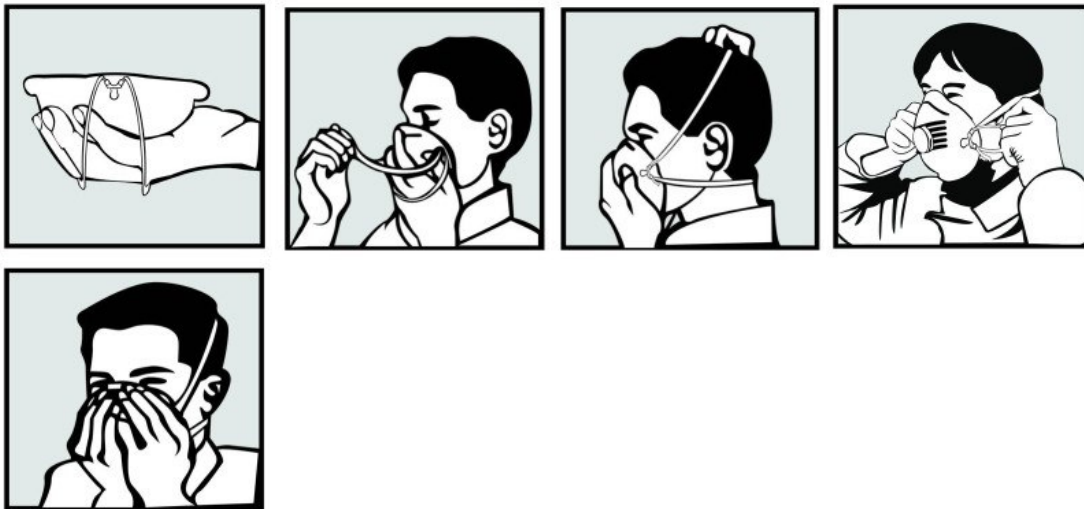

JFY 44150 (N95)

Grupo R31 (N95)

ATEM 4020 (N95)


Eyevex Safety DMCC ER 1396 (N95)

Bielcor B201 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nose area at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nose foam on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Test the fit. Cup both hands over the respirator and exhale vigorously. If any leakage is detected, readjust the position of the respirator according to steps #2, #3 and #4 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

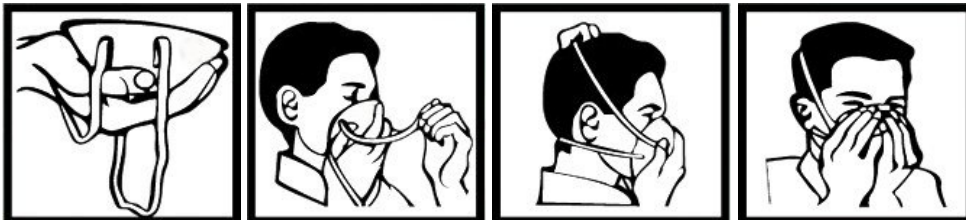

JFY 44151 (N95)

ATEM 4030 (N95)

ALLFASTENERS 13DM11 (N95)


Eyevex Safety DMCC ER 1396V (N95)

Bielcor B226 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nose area at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nose foam on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Test the fit. Cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the respirator, readjust the position of the respirator according to steps #2, #3, and #4 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

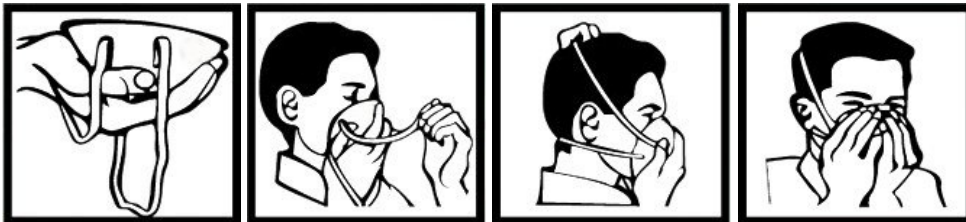


JFY 44153 (N95)

ATEM 4140 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nose area at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nose foam on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Test the fit. Cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the respirator, readjust the position of the respirator according to steps #2, #3, and #4 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

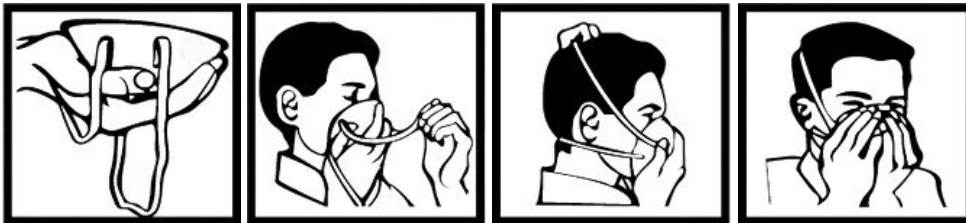


ALLFASTENERS 13DM10 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nose area at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nose foam on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece; if air leaks around the edges, reposition the straps for a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

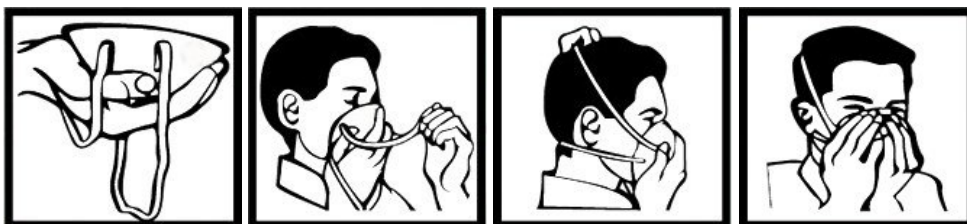

AMC 1210 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, pulling the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mold the nosepiece to shape of your nose.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If any leakage is detected, readjust the position of the respirator according to steps #2 to #5 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



AMC 1151 (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, pulling the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mold the nosepiece to shape of your nose.
5. Test the fit. Cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the respirator, readjust the position of the respirator according to steps #2 to #5 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



AMC 1210 B (N95)

Donning Procedures

1. Hold the respirator in one hand with the nosepiece at your fingertips, allowing the headbands to hang below your hand.
2. Press the respirator against your face with the nosepiece on the bridge of your nose.
3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.
4. Using both hands, mold the nosepiece to shape of your nose.
5. Test the fit. Cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the respirator, readjust the position of the mask according to steps #2 to #5 till get a better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.



JFY PF55150 (N95)

Donning Procedures

1. Unfold top and bottom panels and bend the nose foam to form a cup shape.
2. Hold the center panel in one hand. Press the respirator open side to against face with the foam on the bridge of nose and pull the straps over your head.
3. Place the upper strap high on the back of your head. Move the lower strap below your ears.
4. Adjust top and bottom panels for a comfortable fit. Use both hands to mould the nose foam to shape of your nose for a secure seal.
5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.

If you CANNOT achieve a proper fit, DO NOT enter the contaminated area.
See your supervisor for proper fitting respiratory protection.

