


USER'S INSTRUCTIONS

For Model 4700N100 Pleated Industrial Respirators

Fitting Instructions:

- Users must follow instructions each time respirator is worn.
- It's the wearer's responsibility to obtain a proper fit.
- To choose the correct model/size Moldex Respirator you must fit test and user seal check.
- If you cannot obtain a proper fit do not enter the contaminated area.
- OSHA regulation 1910.134 (f) requires that the user must be fit tested before being assigned a respirator and annually thereafter.
- Use Moldex Qualitative Fit Test Kit. User must be clean-shaven. Any facial hair, such as beards or long sideburns, may prevent the respirator from fitting properly.
- Eyewear must not interfere with face to facepiece seal.
- Re-fit test when there are any changes to the wearers physical condition that may affect fit.

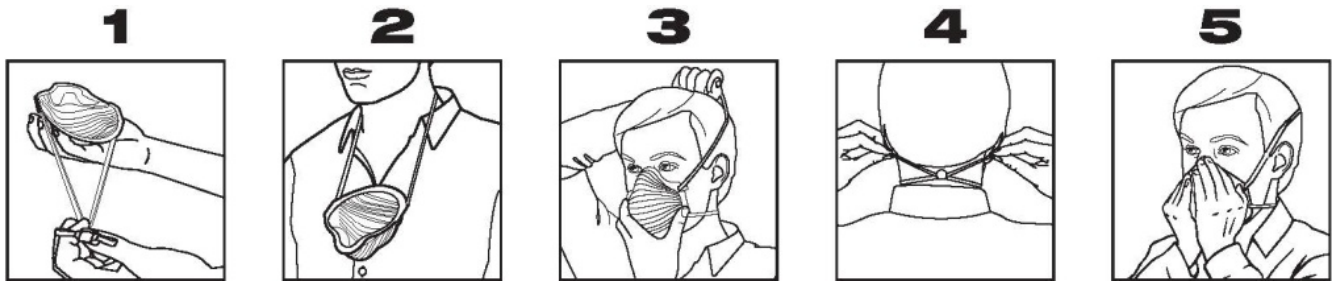

1. Pull adjustment clip and strap fully below the bottom of the mask. (Fig 1)

2. Place strap around neck so outside of shell is against chest. (Fig 2)

3. Fit mask to face and pull top of strap to crown of head. (Fig 3)

4. To tighten pull both strap tabs. (Fig 4). To loosen, grasp both sides of neck strap and pull.

5. Each time user enters contaminated area respirator must be seal checked. Cover front of respirator by cupping both hands. (Fig 5). INHALE SHARPLY. A negative pressure should be felt inside respirator. If any leakage is detected at respirator edges, tighten or adjust strap by pulling back along the sides and/or reposition respirator. Repeat until sealed properly, otherwise see your supervisor. Entry into a contaminated area with an improper fit may result in sickness or death.

6. To hand around neck, pull top strap away from head, then pull mask down. (Fig 2)