



1840 Respirator

IMPORTANT NOTICE TO PURCHASER

Manufacturer warrants this product to be free from defects in material or workmanship. In the event this product proves on inspection to contain defects in material or workmanship, Manufacturer undertakes at its option, to replace any portion proving defective or to refund to the Buyer the purchase price paid by buyer for this product. This warranty and Buyer's remedy of replacement or refund constitute the Manufacturer's exclusive warranty and the Buyer's sole remedy, in lieu of all other warranties and remedies expressed or implied. Except as provided above, Manufacturer shall not be liable for any loss or damage, whether direct, consequential, or incidental occasioned by the sale, use or misuse of this product, other than death or personal injury directly resulting from Manufacturer's negligence. Buyer shall determine the suitability of this product for their intended use and except provided above, assumes all risks and liability in connection therewith.

Refer to User's Instructions Before donning.
Part No. 550917 Rev E

USE FOR:

1. All particulate aerosols (95% filter efficiency), time use restrictions may apply.
2. Dusts of coal, cotton, chromium, manganese, aluminum, flour, iron, and certain other substances from the processing of minerals and other materials.
3. Mists from sprays that do not produce harmful vapors or gases of minerals and other materials.
4. Fumes from heating of metals when welding or brazing.

WARNING AND INSTRUCTIONS:

1. A properly selected respirator is essential to protect your health. Before using this or any product, consult an Industrial Hygienist or Occupational to determine its suitability for your intended use.
2. This product will not protect against gases or vapors or in spray paint operations.
3. Do not use in sand blasting operations.
4. Do not use for protection against asbestos.
5. This product does not supply oxygen. Use only in well ventilated areas containing sufficient oxygen to support life.
6. Do not use when concentrations of contaminants are unknown or immediately dangerous to life, or when concentration exceed 10X PEL.
7. Leave work area immediately if: (a) breathing becomes difficult; (b) dizziness or other signs of distress occur.
8. If user has any illness or disorder, consult a license medical doctor to determine suitability of use.
9. Facial hair and certain facial characteristics may prohibit effective use of this product.
10. Use only in accordance with instructions relating to this product.
11. Discard and replace respirator if it becomes damaged or breathing resistance becomes excessive.
12. Do not alter or modify this product in any way.
13. Follow the manufacturers instructions for fitting the respirator to the face.

"S" - SPECIAL OR CRITICAL USE INSTRUCTIONS:

The model 1840 filtering facepiece respirator has been manufactured by Louis M. Gerson Co., Inc. for Bunzl Safety under TC-84A-0383


NOTE: Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In the United States, employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.

FITTING INSTRUCTIONS:

Thread top strap through buckles.
Repeat for bottom strap and buckle.



1. Position bottom strap around the back of the head, just below the ears.

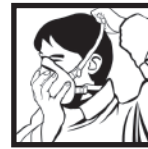

2. Position top strap around the back of the head, just above the ears.



3. Adjust the tension by pulling on end tab of each strap.





4. Using both hands, mold the metal nosepiece to the shape of your nose.



5. To release strap tension, without removing the respirator push out on back of buckle.



6. Check seal of respirator on the face, prior to use, for proper fit.
 - a) Cup both hands over the front of the respirator being careful not to disturb position.
 - b) Inhale sharply. A negative pressure should be felt inside respirator. If leakage is suspected, adjust position of respirator and/or strap and repeat procedure.

 Bunzl Safety Cambridge, Ontario 1-877-623-4455			
This respirator is approved only in the following configuration:			
TC-	Protection ¹	Respirator	Cautions and Limitations ²
84A-0383	R95	1840	ABCJMNOPS
1. Protection: (R95 Particulate Filter (95% filter efficiency level) effective against all particulate aerosols; time use restrictions may apply.			
2. Cautions and Limitations A. Not for use in atmospheres containing less than 19.5% oxygen. B. Not for use in atmospheres immediately dangerous to life or health. C. Do not exceed maximum use concentrations established by regulatory standards. J. Failure to properly use and maintain this product could result in injury or death. M. All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations. N. Never substitute, modify, add, or omit parts. Use exact replacement parts in the configuration as specified by the manufacturer. O. Refer to user's instructions and/or maintenance manuals for information on use and maintenance of this respirator. P. NIOSH does not evaluate respirators for use as surgical masks. S. Special or Critical User's Instruction and/or Specific use limitation apply. Refer to User's Instructions before donning.			

If proper fit cannot be achieved, do not enter contaminated area. See your supervisor.

BUNZL SAFETY
 Cambridge, Ontario CANADA
 bunzlsafety.ca