



JSP Safety Inc, 9815 Sam Furr Road, Suite J17, Huntersville, NC 28078  
 www.jspna.com | sales@jspna.com | 1-833-JSP-SAFE



JSP Ltd, OX29 0TA, UK  
 ©2021 JSP Ltd.  
 RFGZ-001-721\_21-01

**US**

**JSP 721M N95 AIR-PURIFYING RESPIRATOR**



**FILTERING FACE PIECE APPROVAL LABEL**

JSP Ltd, Worsham Mill, Minster Lovell,  
 Oxford, OX29 0TA, England.  
 +44(0)1993 824000



**721M N95 Air-Purifying Respirator**

**THIS RESPIRATOR IS APPROVED ONLY IN THE FOLLOWING CONFIGURATION:**


TC-	Protection <sup>1</sup>	Respirator	Caution and Limitations <sup>2</sup>
84A-9304	N95	721M X	ABCJMNOP

**1. Protection**

N95 - Particulate Filter (95% filter efficiency level) effective against particulate aerosols free from oil; time use restrictions may apply

**2. Caution and Limitations**

- A - Not for use in atmospheres containing less than 19.5% Oxygen.
- B - Not for use in atmospheres immediately dangerous to life or health.
- C - Do not exceed maximum use concentrations established by regulatory standards.
- J - Failure to properly use and maintain this product could result in injury or death.
- M - All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations.
- N - Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by manufacturer.
- O - Refer to User Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- P - NIOSH does not evaluate respirators for use as surgical masks.

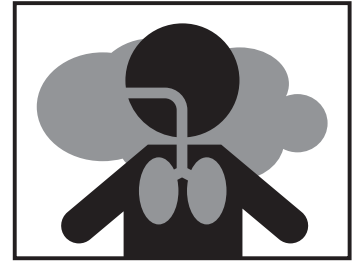

**WARNING**

**NIOSH APPROVED: N95 95% filtration efficiency against solid and liquid aerosols that do not contain oil.**

This respirator helps protect against certain particulate contaminants but does not eliminate exposure to or the risk of contacting disease or infection. **MISUSE MAY RESULT IN SICKNESS OR DEATH.**

**IMPORTANT NOTICE TO PURCHASER:**

The following warranty is made in lieu of all other warranties expressed or implied, including but not limited to, the implied warranties of merchantability and fitness for purpose. Manufacturer warrants this product to be free from defect. Manufacturer's only obligation shall be, at our option, to replace any portion providing defective or to refund the purchase price thereof. User shall determine the suitability of the product for his intended use, and assume all risks and liability in connection therewith.

**BEFORE USE, WEARER MUST READ AND UNDERSTAND THESE INSTRUCTIONS. KEEP USER INSTRUCTIONS FOR REFERENCE.**

**USE AGAINST:**

NIOSH approved for protection against particulate aerosols free of oils. JSP Limited recommends this respirator for use against particulate such as flour, iron, coal and minerals.

**DO NOT USE AGAINST:**

1. Vapours, paint spray, oil-based aerosols, asbestos and sand blasting.
2. Any contaminant whose concentration is unknown, or immediately dangerous to life or health.
3. Concentrations of Dust Mists which exceed the maximum use concentration or 10 times contaminant's permissible exposure limit established by OSHA or applicable government occupational exposure limits, whichever is lower.

**WARNING:**

1. Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In the United States employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.
2. Time use restrictions may apply" refers to the potential limited filter life associated with degradation of the filter efficiency as the result of exposure to aerosols in the workplace. The service life is dependent upon the concentration, type of contaminant, and use conditions encountered in the workplace, and must be determined on a workplace basis.
3. Leave contaminated area immediately if the respirator becomes damaged, proper fit cannot be obtained or breathing becomes difficult. Dispose and change the respirator.
4. The respirator has been tested in compliance with 42CFR Part 84 approval requirements. However, it is subject to inspection prior to each use to assure there are not defects and no damage has occurred.
5. Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In the United States employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.

**IMPORTANT LIMITATIONS:**

1. All instructions and warnings have to be followed. Failure to do so may reduce the efficiency of the respirator and may cause sickness or death.
2. Training on the proper use of respirator must be provided by the employer in accordance with safety and health standards.
3. Do not alter, misuse or modify the respirator.
4. Not suitable for persons with beards or other facial hair which may reduce the efficiency of respirator.
5. The use and reuse of this respirator is subject to consideration of hygiene, soiling, damage and increased breathing resistance. Service time should not be extended beyond 8 total hours of use.
6. Store in a cool dry place. Avoid direct exposure to sunlight during storage as the filter media in this respirator can be degraded by extended exposure to direct sunlight.
7. This respirator is designed for occupational/professional use by adults who are properly trained in their use and limitations. This respirator is not designed to be used by children.

**FITTING INSTRUCTIONS**

The respirator user must be fit tested according to OSHA regulation 29 CFR 1910.134.



1. Hold the respirator in one hand with nose piece at your fingertips, allowing the headbands to hang below your hand.



2. Press the respirator against your face with the nose piece on the bridge of your nose.



3. Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.



4. Using both hands, mould the nose piece to the shape of your nose.



5. Test the fit. Cup both hands over the respirator and exhale vigorously. If air flows around your nose, tighten the nosepiece. If air leaks around the edges, reposition the bands for better fit.