


APPLICATION : N95-Particulate Filter (95% filter efficiency level). Effective against particulate aerosols free of oil. Time use restrictions may apply.

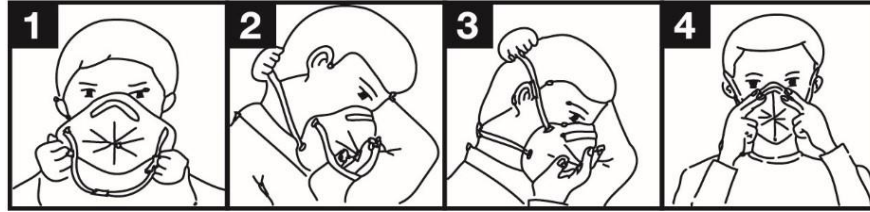

FITTING INSTRUCTIONS

Follow these instructions each time respirator is worn.

1. Cup the respirator in the hand, allowing the head straps to hang freely.
2. Hold the respirator under the chin with the nosepiece facing outwards. Place the lower head strap around the neck below the ears.
3. Holding the respirator against the face with one hand, place the top head strap above the ears, around the crown of the head.
4. Place hands on each side of the respirator and move slightly right, left, up and down, to adjust the position of the respirator and achieve the most optimal fit on the face.
5. Place both index fingers on the nose clip and apply pressure onto nose clip forming to shape of the nose for best fit on face.

FIT-CHECK THE FACE-SEAL AS FOLLOWS:

1. Place both hands over the respirator - do not disturb the position of the respirator;
2. Inhale sharply (a negative pressure should be felt inside the respirator);
3. If you detect air-leaks, readjust the head straps and/or the nose clip.

WARNING: If you cannot achieve satisfactory fit, do NOT enter the contaminated area. See your Supervisor.



USE INSTRUCTIONS:

1. Failure to follow all instructions and limitations concerning the use of the respirator and/or failure to wear the respirator for the whole duration of exposure to contaminants can seriously reduce the performance characteristics of the respirator and lead to illness, injury or death.
2. Before Occupational Use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In United States, employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.
3. Discard the respirator and replace with a new one if:
 - Excessive clogging of the respirator causes breathing difficulty.
 - The respirator becomes damaged.

*Filtering facepiece respirators are to be inspected prior to each use to assure there are no holes in the breathing zone, especially around weld attachment of headbands and no damage has occurred.
4. Visually inspect the filtering facepiece prior to each use to assure that there are no holes in the breathing zone, especially around the weld attachment of the headbands to ensure no damage has occurred. Discard respirator if any visual signs of holes or damage.
5. Leave the contaminated area if dizziness, irritation or other distress occurs.

USE LIMITATIONS:

1. Do **NOT** use the respirator or enter or stay in a contaminated area under the following circumstances:
 - atmosphere contains less than 19.5% oxygen
 - atmosphere contains oil aerosols
 - for protection against gases or vapors
 - contaminants or their concentrations are unknown or immediately dangerous to life or health
 - concentrations or contaminants exceed maximum use concentrations in applicable OSHA standards or applicable government regulations or 10 times the PEL (Permissible Exposure Limit), whichever is lower • for sandblasting, paint-spray operations, asbestos
2. Do **NOT** modify or misuse the respirator.
3. Do **NOT** use the respirator with beards or other facial hair that interferes with direct contact between the face and the edge of the respirator, or any other conditions that may prevent a good face-seal.

Storage conditions:

Temperature: -20°C +38°C

Humidity: Less than 80%

WARNING: This respirator helps protect against certain contaminants. It may not eliminate the risk of contracting disease or infection. **Misuse may result in sickness or death.**

Materials which may come into contact with the wearer's skin could cause allergic reactions to susceptible individual
FOR MORE INFORMATION or assistance on Honeywell® products, contact your local Honeywell distributor