

N95

RESPIRATOR

FOLDABLE DESIGN

When fit testing or reordering, be aware that this is a large size mask and that other sized masks may fit better.

User Instructions

(IMPORTANT: Keep these instructions for reference)

This respirator contains no compounds from natural rubber latex.

WARNING

This respirator helps protect against certain particles.

Misuse may result in sickness or death. For proper use, see supervisor instructions.

Respirator Use:

For protection against particles such as those from metal, wood, minerals, coal, iron ore, cotton, pollen, flour, and certain other substances as well as liquid or non-oil based particles from sprays that do not also emit oil aerosols or vapors.

Do Not Use For:

Gases and vapors, including those present in paint spraying operations, or any toxic substance such as asbestos or sandblasting or for oil aerosols. This respirator does not supply oxygen.


Biological Particles

This respirator can help reduce inhalation exposures to certain airborne biological particles but cannot eliminate the risk of contracting infection, illness or disease. OSHA and other government agencies have not established safe exposure limits for these contaminants.

Additional Use Limitations

1. Inspect the respirator for damage. If your respirator appears damaged, DO NOT USE IT. Replace it with a new one.
2. Failure to follow all instructions and use limitations for this respirator and/or failure to wear this respirator during all times of exposure may result in sickness or death.
3. Do not allow facial hair, hair, jewelry, glasses, clothing, or anything else to prevent proper placement or come between your face and the respirator.
4. Do not alter, abuse or misuse the respirator.
5. Leave the contaminated area immediately and contact supervisor if dizziness, irritation, or other distress occurs.
6. This respirator is designed for use by adults who are properly trained in their use and limitations. This respirator is not designed to be used by children.
7. Employers must comply with the OSHA Respiratory Protection Standard, 29 CFR1910.134 and the requirement for fit testing the respirator if respirators are used by employees performing work-related duties.

Before occupational use of this respirator a written respiratory protection program must be implemented to meet all the local government requirements. In the United States employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.

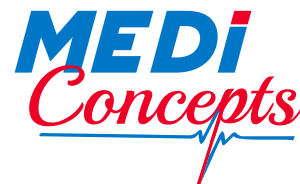

WORKPLACE/OCCUPATIONAL USER INSTRUCTIONS

Time Use Limitations

If the respirator becomes damaged, soiled, or breathing becomes difficult, leave the contaminated area immediately and replace the respirator.

WASH YOUR HANDS BEFORE PUTTING ON AND AFTER TAKING OFF THE MASK.

Fitting Instructions



Position the respirator in your hands with the nose piece at your fingertips.



Cup the respirator in your hand allowing the headbands to hang below your hand. Hold the respirator under your chin with the nose clip up.



The bottom strap is positioned around the neck and below the ears. The top strap goes over and rests at the top back of your head. Do not crisscross straps.



Place your fingertips from both hands at the top of the metal nose clip (if present). Slide fingertips down both sides of the metal strip to mold the nose area to the shape of your nose.



Checking for tightness, exhale sharply, negative pressure should be felt in the mask, re-adjust or repeat step 4 as necessary. Adjust the tightness as necessary by pulling the headband clips.

Removal Instructions:

1. Cup respirator in hand to maintain position on face and pull bottom strap over your head.
2. Hold respirator in position and pull top strap over your head and remove respirator.



CREATIVE CONCEPTS MANUFACTURING LTD

Suite F2 | 3F Phase 2 | Hang Fung Industrial Building No.2G Hok Yuen Street | Hung Hom | Kowloon | Hong Kong

www.medicconceptsgroups.com

THIS RESPIRATOR IS APPROVED ONLY IN THE FOLLOWING CONFIGURATION:

TC-	Protection ¹	Respirator	Cautions and Limitations ²
84A-9244	N95	02887 X	ABCJMNOPS

1. Protection

N95-Particulate Filter (95% filter efficiency level) Effective against particulate aerosols free of oil; time use restrictions may apply.

2. Cautions and Limitations

A - Not for use in atmospheres containing less than 19.5% oxygen.

B - Not for use in atmospheres immediately dangerous to life or health.

C - Do not exceed maximum use concentrations established by regulatory standards.

J - Failure to properly use and maintain this product could result in injury or death.

M - All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations.

N - Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.

O - Refer to users instructions, and/or maintenance manuals for information on use and maintenance of these respirators.

P - NIOSH does not evaluate respirators for use as surgical masks.

S - Special or critical User Instructions and/or specific use limitations apply. Refer to User Instructions before donning.

S - Special Instructions Section:

The model/part number 02887 has been manufactured by Company Rizhao Sanqi Medical & Health Article Co., Ltd. for private label Company Creative Concepts Manufacturing Ltd. under TC-84A-9244.



Manufactured by:

Rizhao Sanqi Medical&Health Articles Co. Ltd.
Address: Heshan International Industrial Park
Rizhao City | Shandong Province | China



Manufactured for:

CREATIVE CONCEPTS MANUFACTURING LTD
Suite F2 | 3F Phase 2 | Hang Fung Industrial Building
No.2G Hok Yuen Street | Hung Hom
Kowloon | Hong Kong. Tel: +852-27736401

Distributed by:

CREATIVE CONCEPTS USA
Hoboken | NJ 07030 | USA
Contact@CreativeConceptsusa.com
www.medicconceptsgroup.com

Item #02887
Made in China

N95_3Q_FLD_IM_MC_ENG_080522_V3
Part#: 02887 Revision 1